



Floorstanding All-Rounder Traffic Camera

Quick Start Guide

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Note	Provides additional information to emphasize or supplement important points of the main text.
 Caution	Indicates a potentially hazardous situation, which if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Danger	Indicates a hazard with a high level of risk, which if not avoided, will result in death or serious injury.

TABLE OF CONTENTS

Chapter 1 Device Overview.....1

 1.1 Appearance.....1

 1.2 Component 2

Chapter 2 Device Installation 3

Chapter 3 Device Configuration.....5

Chapter 1 Device Overview

1.1 Appearance

The appearance of Floorstanding All-Rounder Traffic Camera is shown as below.

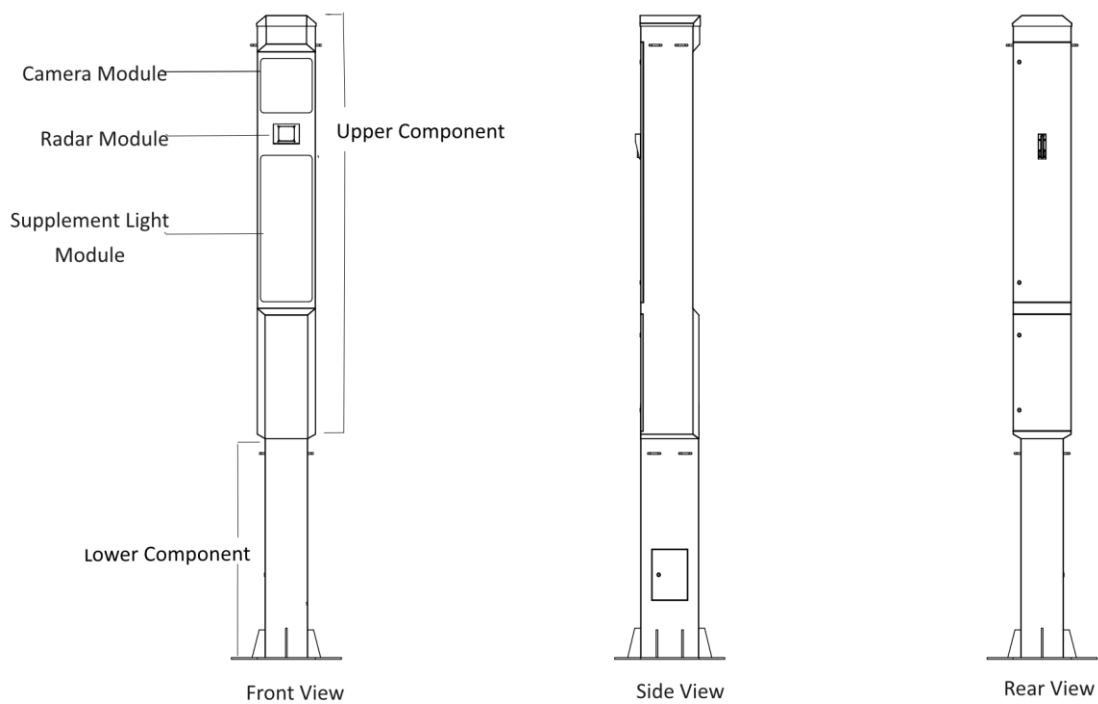


Figure 1-1 Device Overview

1.2 Component

The components of the device are shown as below.

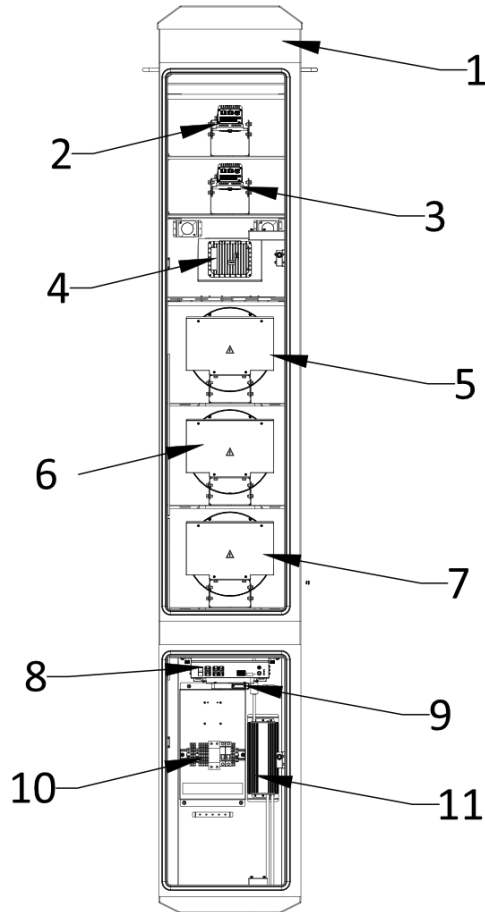


Figure 1-2 Component

No.	Name	No.	Name
1	Antenna module (optional)	2	Camera module 1
3	Camera module 2	4	Radar module
5	Supplement light module 1	6	Supplement light module 2
7	Supplement light module 3	8	Terminal server
9	Wireless box (optional)	10	Air switch module
11	Power supply module		

Chapter 2 Device Installation

Step 1 Dig a foundation pit according to the dimensions of the lower component bottom.

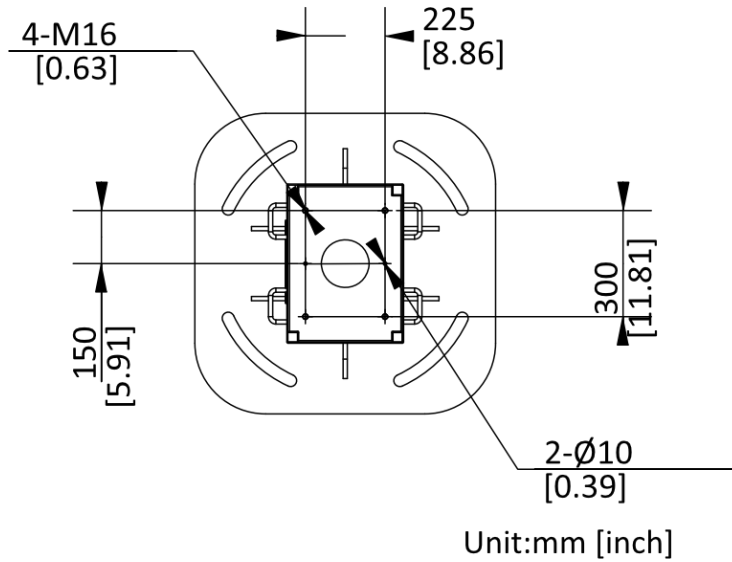


Figure 2-1 Dig Foundation Pit

Step 2 Use a crane to lift the lower component and place it into the foundation pit, adjust the installation angle, and then tighten it according to the site requirements.

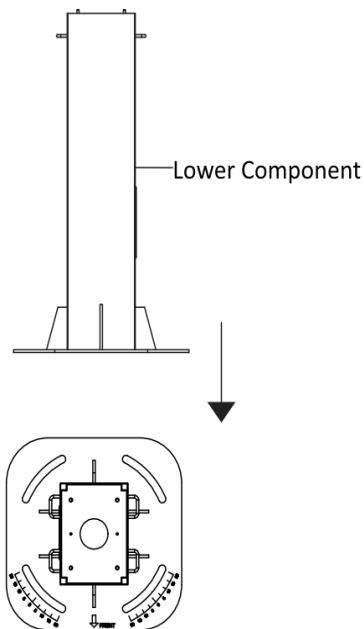


Figure 2-2 Fix Lower Component

Step 3 Open the lower door of the upper component, lift the upper component and align it with the locating studs of the lower component, and then fasten the 4 M16 screws.

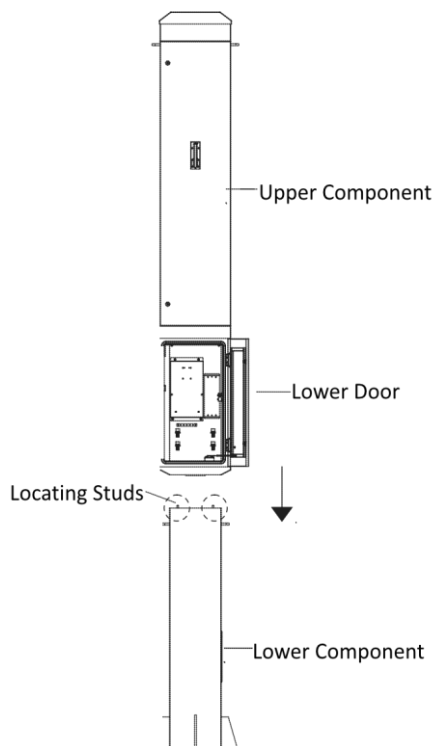


Figure 2-3 Fix Upper Component

Step 4 Close the lower door of the upper component to complete the installation.

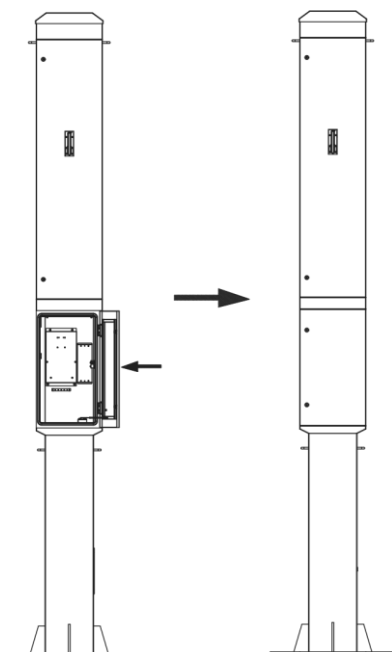


Figure 2-4 Close Lower Door

Chapter 3 Device Configuration

Scan the QR code below to get the configuration manual for detailed configuration.

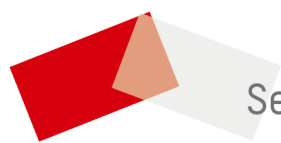


Figure 3-1 Configuration Manual QR Code

Scan the QR code below to get the operation manual for detailed operation.



Figure 3-2 Operation Manual QR Code



See Far, Go Further