

 
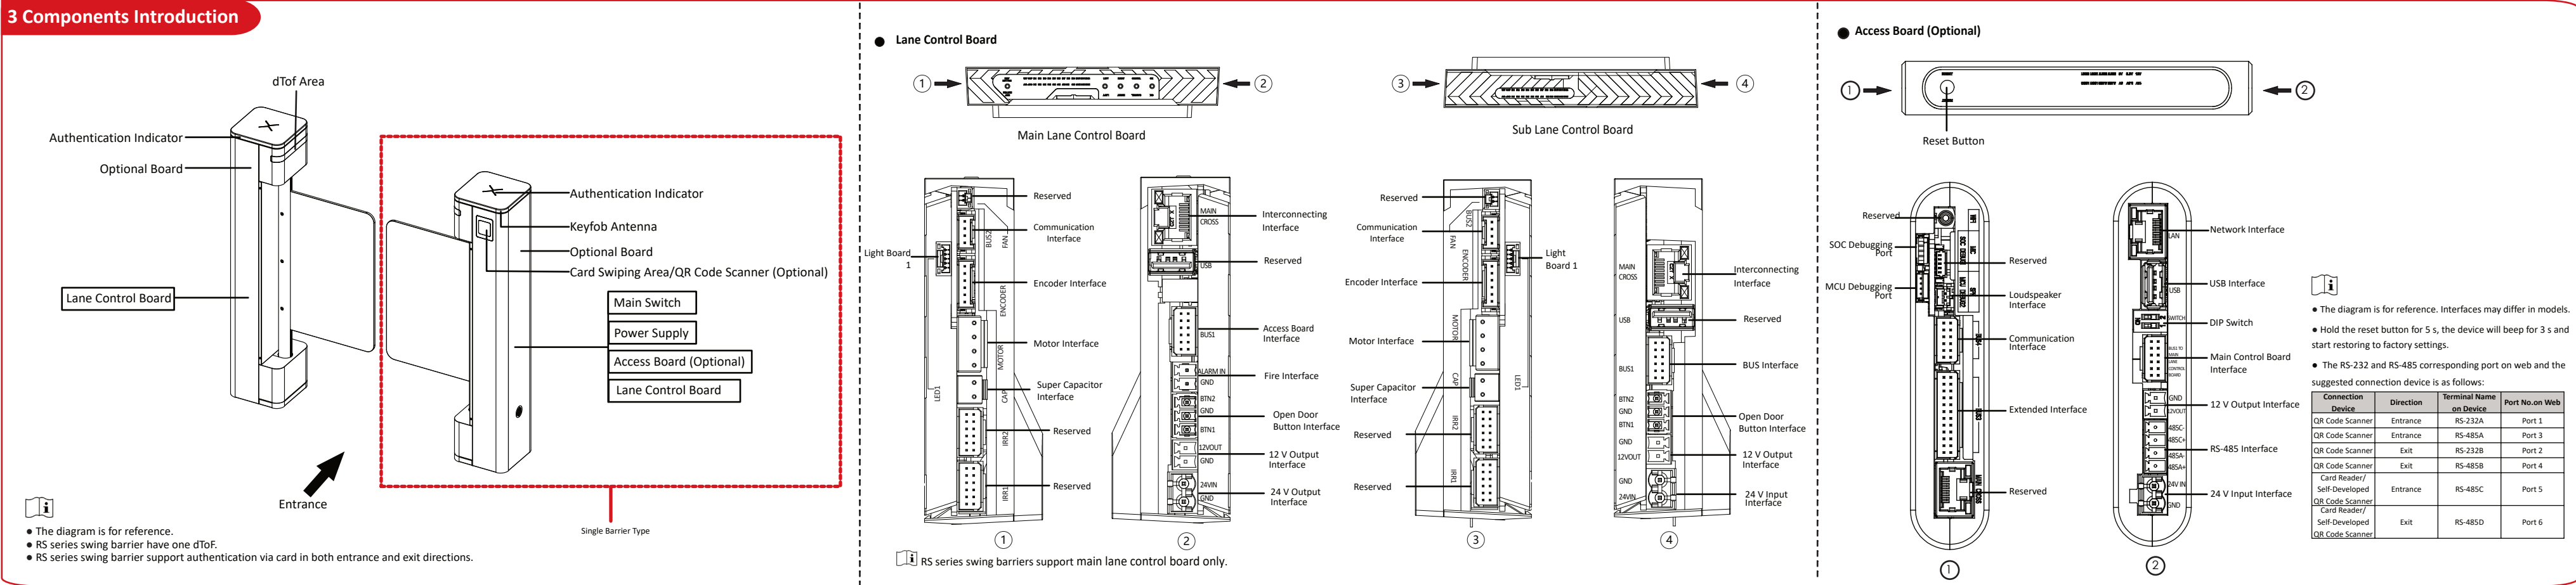
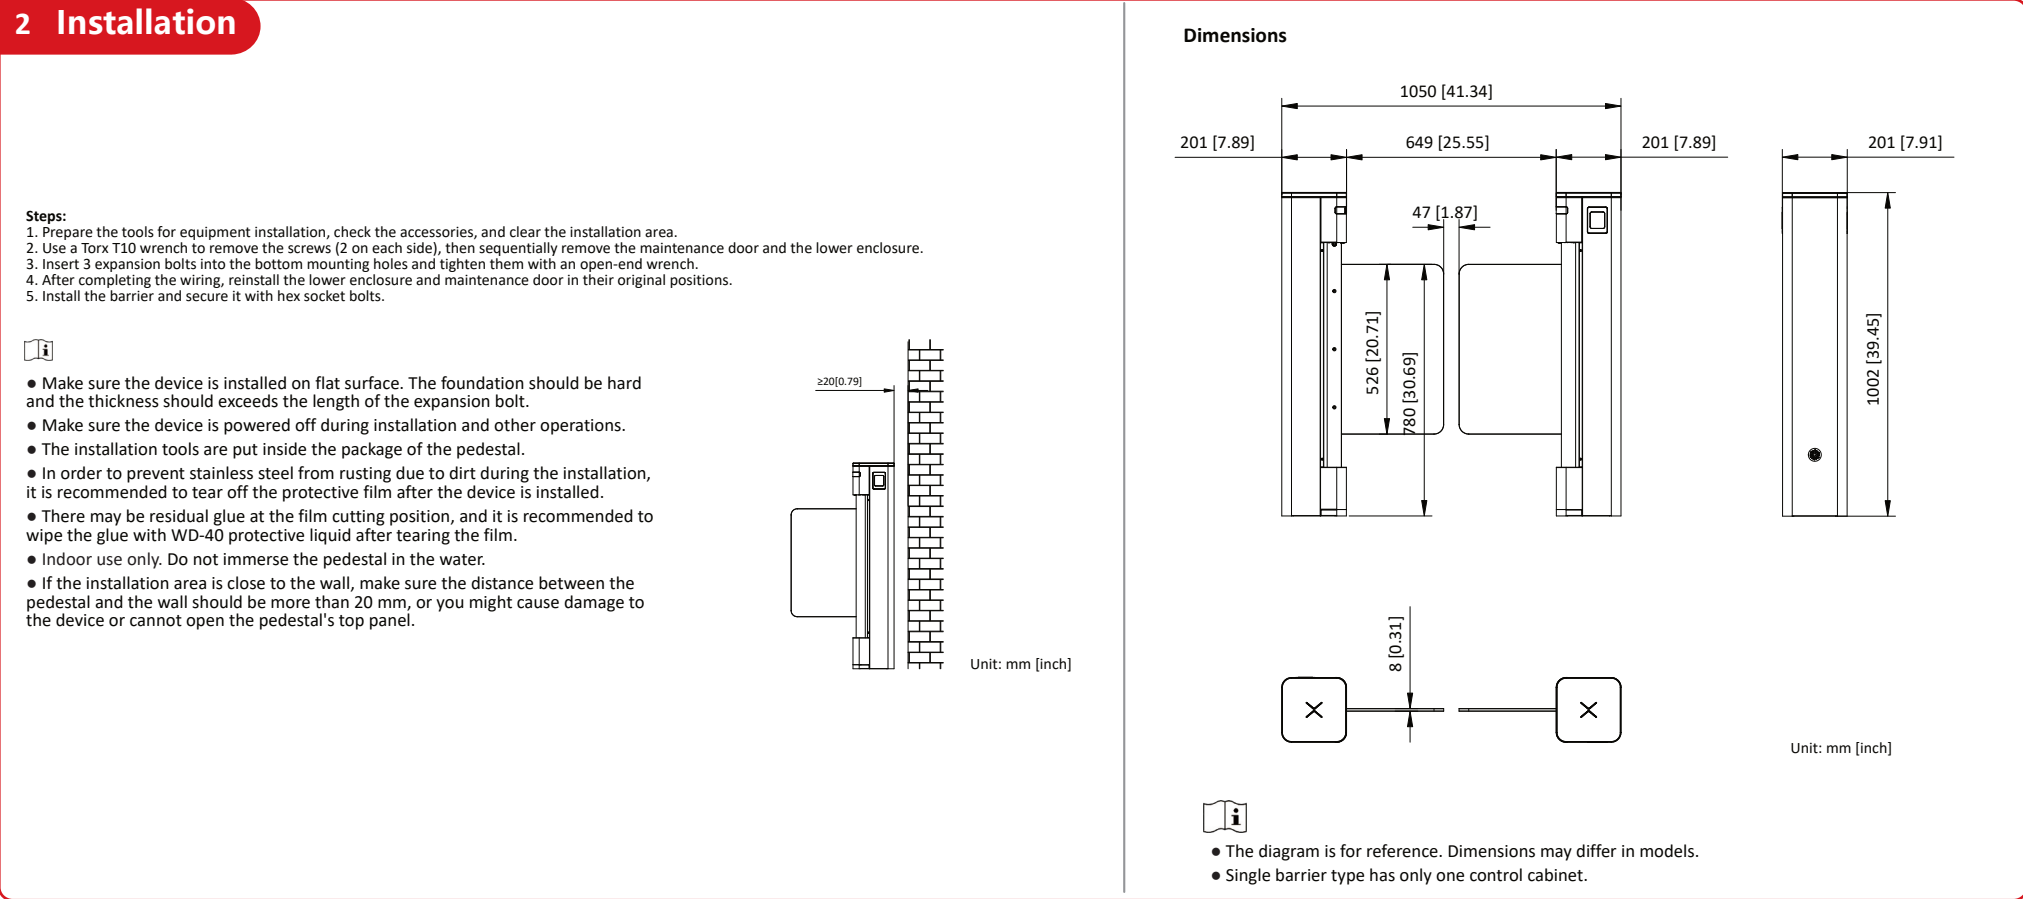





● Optional Board

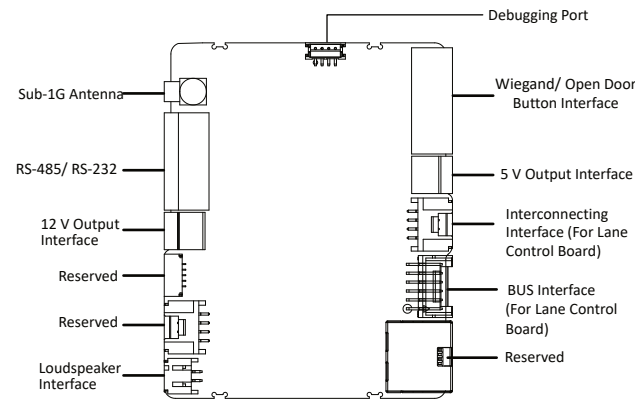

● Card Reader (Optional)

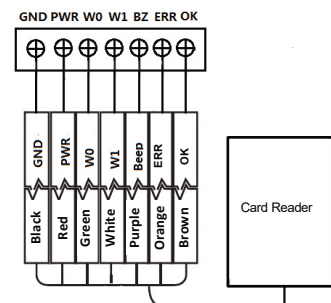


● QR Code Scanner (Optional)

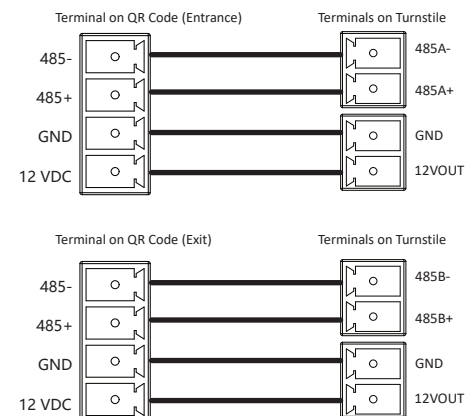

4 Wiring Diagram



- It is recommended to use Hikvision matched distribution cabinet (sold separately) to covert the AC mains power to 24 V.
- Power supply: 24 V DC; Power supply voltage fluctuation range: $\pm 5\%$.
- The ① and ② refer to the two sides of a same board.
- The supplied interconnecting cables need connecting on-site: CAT5e Communication cable. The cable is 3 m in length and put inside the package.
- RS series swing barrier supports main lane control board only.

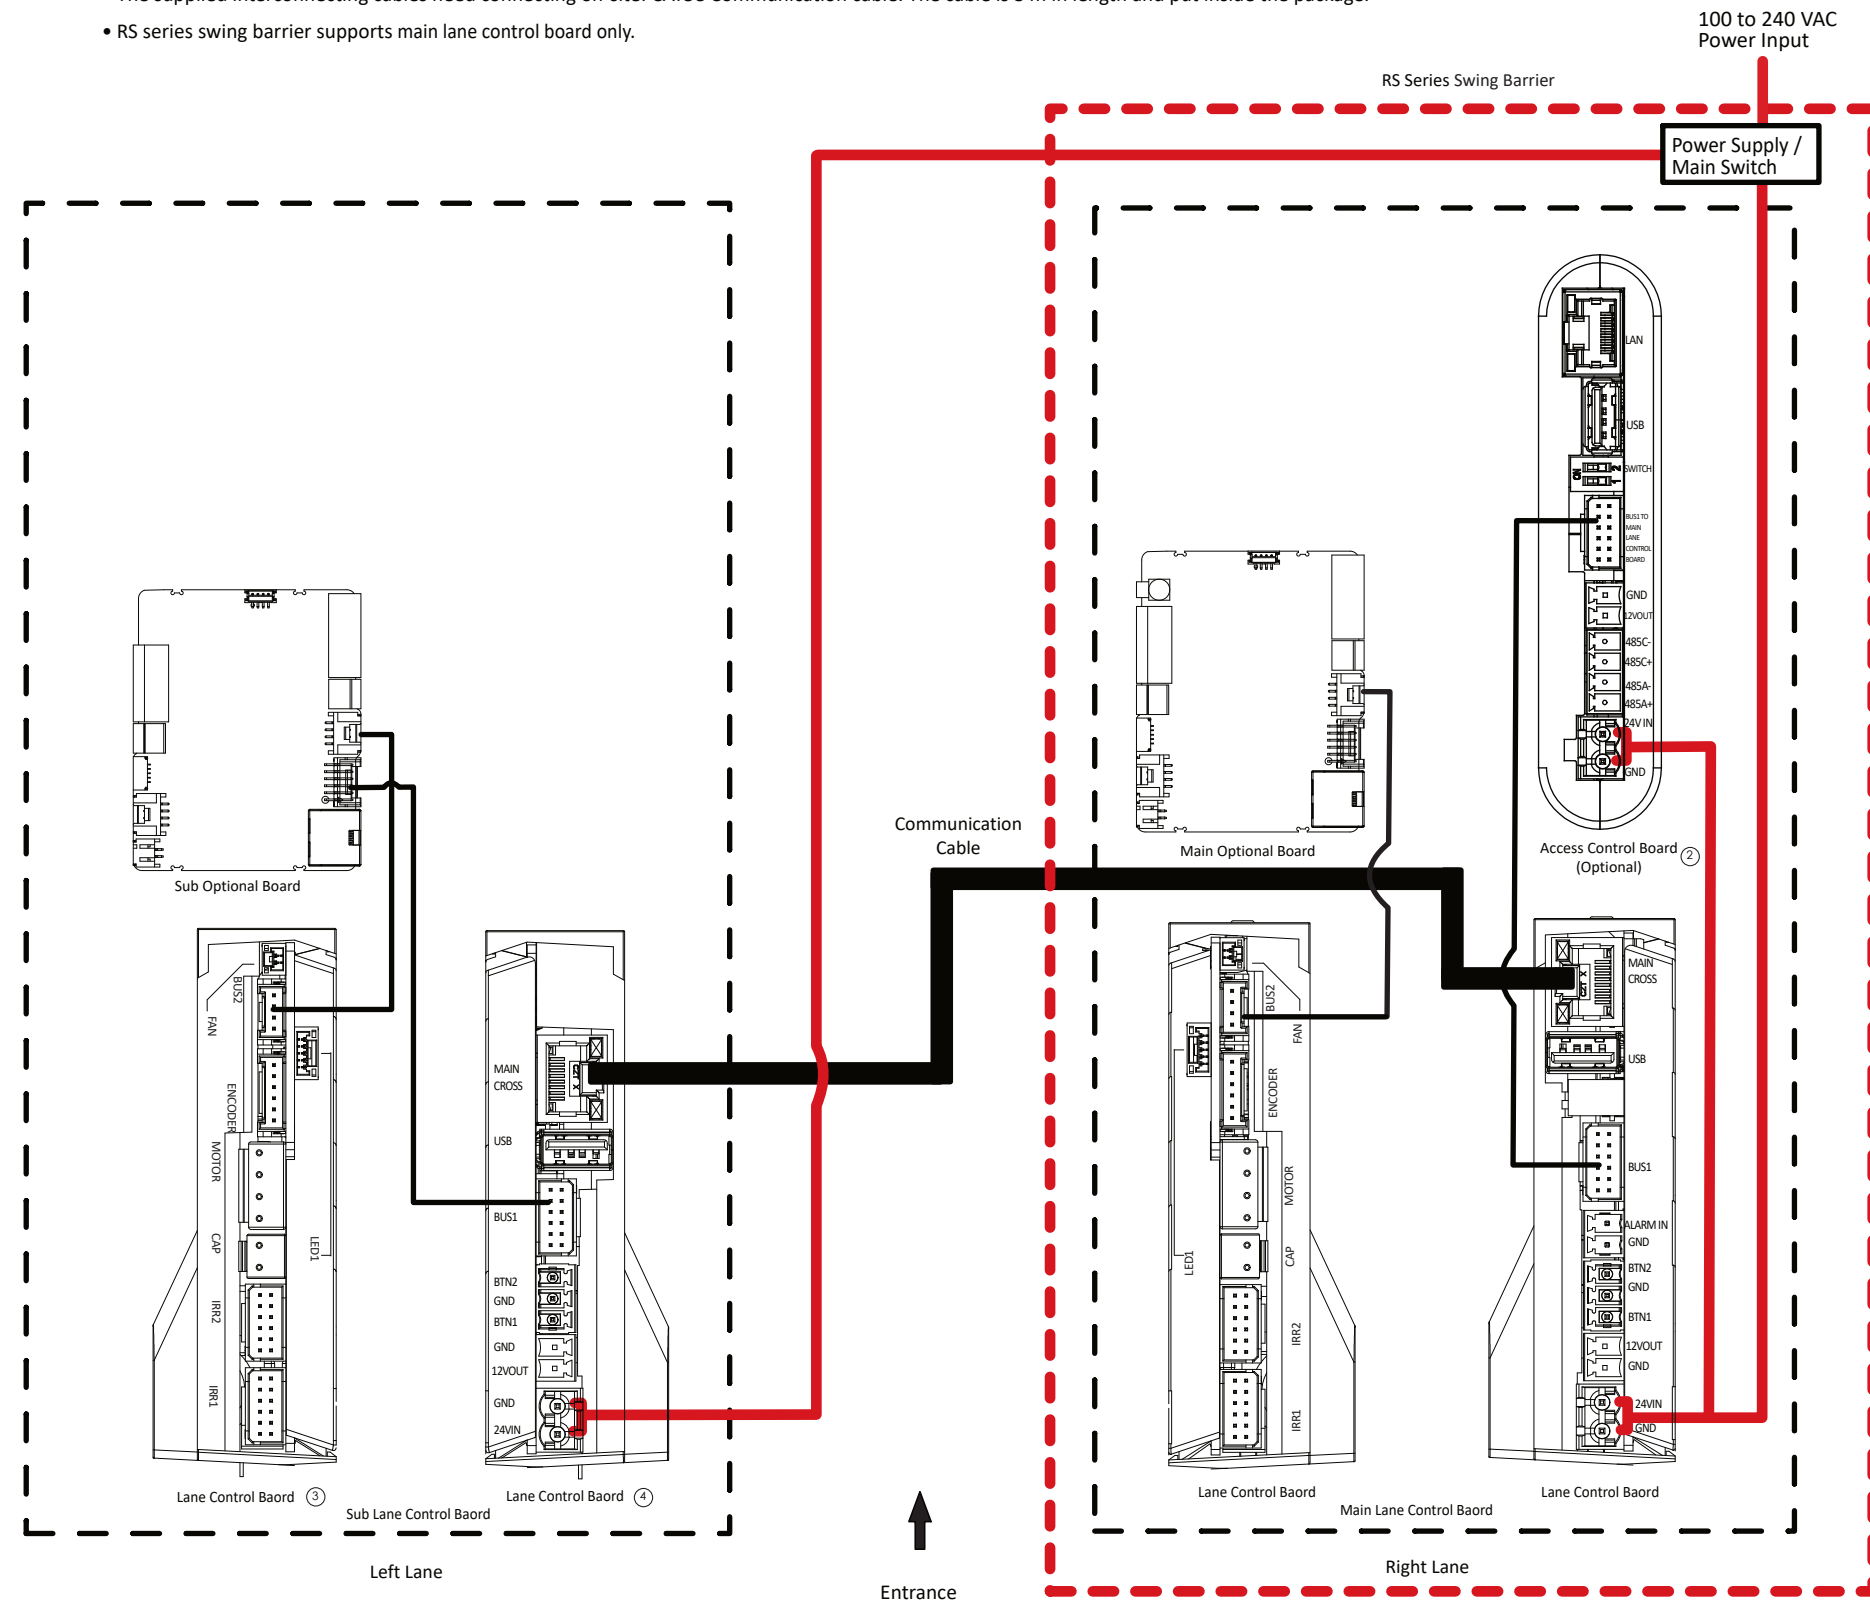

5 Quick Start

● Activation

- Make sure the device and the computer are under the same network segment.
- Enter the device default IP address (192.0.0.64) and create a new password (admin password) to activate the device.
- Download SADP or client software from the official website and run it, search all devices on your LAN, select your device and create a new password (admin password) to activate the device.



- We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. Characters containing admin and nmda are not supported.

● Configuration via PC Web

Make sure the device is activated. Enter the device IP address in the address bar of the web browser and press **Enter** to enter the login page. Enter the device user name and the password. Click **Login**.

● Configuration via Mobile Web

If device hotspot is disabled: Make sure your mobile phone and the device are connected to the same network. Place your phone to the NFC area and the device IP address will pop up, tap the address to go to the login page.

If device hotspot is enabled:

Android System: Place your phone to the NFC area and the name and password of the device hotspot will be obtained automatically. Confirm to connect, you will go to the login page.

iOS Ssystem: Enable the phone's Wi-Fi function, and connect to the current device's hotspot. After hotspot is connected, you will go to the login page.

Hotspot Name: AP_ Serial No.

Hotspot Password: Device's Serial No.

You can configure the turnstile basic parameters, keyfob settings, light settings, network settings, access control settings, etc.

● Configuration via Client Software

After downloading the client software, you can conduct device management, group management, person management and access control management.

About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<https://www.hikvision.com>). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product

This product can only enjoy the after-sales service support in the country or region where the purchase is made.

Acknowledgment of Intellectual Property Rights


- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.
- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.
- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

6 Button Description

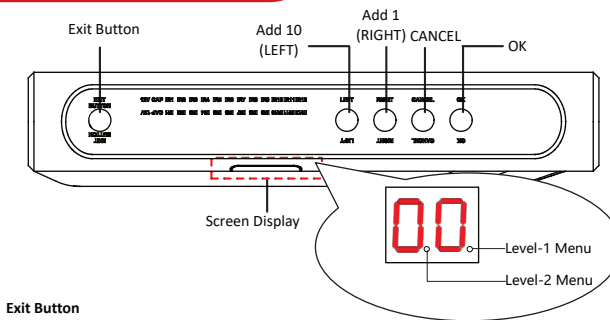

Exit Button

Single press to open from the entrance position.
Double press to open from the exit position.

Parameter Configuration Button

Configuration data: Configuration data is displayed by two digital tubes.

LEFT: Press this button to add ten to configuration data.

RIGHT: Press this button to add one configuration data.

CANCEL: Return to the level-1 menu, or exit the configuration from the level-1 menu.

OK: Confirm the data, or enter configuration mode, or enter the submenu.

Level-1 Menu: If the decimal point on the right is on, it indicates the level-1 menu. The number represents the configuration item number.

Level-2 Menu: If the decimal point in the middle is on, it indicates the level -2 menu. The number represents the parameters of a configuration item.

Procedure

Enter the configuration mode. The number of 1 will show up on the right side of the screen and the device is ready for configuration.

Press **LEFT** and **RIGHT** to set the configuration No. Press **OK** to enter the level-2 menu and view the parameters. Press **CANCEL**, or conduct no operation for 5 s to cancel configuration.

Press **LEFT** and **RIGHT** to set the parameters at your needs. Press **OK** to save the change or press **CANCEL** back to configuration No. setting without saving changes. Conduct no operations for 5 s to cancel configuration.



- If the optional board is not installed, the error code of "59" will appear but the device functions normally.
- Refer to the user manual for button description details.