



Swing Barrier

Video Guide

Contents

Chapter 1 Open Upper Cover 1

Chapter 2 Remove Maintenance Door 2

Chapter 3 Interconnecting 3

Chapter 4 Main Switch 4

Chapter 5 QR Code Scanner Installation and Wiring 5

Chapter 1 Open Upper Cover

Refer to the open upper cover installation video for details:

Refer to the link to see the high-definition video: <https://enpinfodata.hikvision.com/analysisQR/showQR/e15b507c>

Chapter 2 Remove Maintenance Door

Refer to the main switch wiring video for details:

Refer to the link to see the high-definition video: <https://enpinfodata.hikvision.com/analysisQR/showQR/1839a85e>

Chapter 3 Interconnecting

Refer to the interconnecting cable wiring video for details:

Refer to the link to see the high-definition video: <https://enpinfodata.hikvision.com/analysisQR/showQR/e15b507c>

Chapter 4 Main Switch


Refer to the main switch wiring video for details:

Refer to the link to see the high-definition video: <https://enpinfodata.hikvision.com/analysisQR/showQR/36fd5db2>

Chapter 5 QR Code Scanner Installation and Wiring

Refer to the RS-485 card reader and QR code scanner installation and wiring video for details:

Refer to the link to see the high-definition video: <https://enpinfodata.hikvision.com/analysisQR/showQR/41f6b20c>

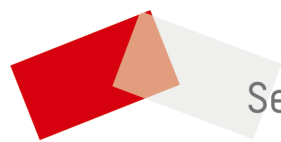

See Far, Go Further