



Entrance & Exit Product Guide Video

Contents

Chapter 1 Home Page	1
Chapter 2 All-In-One Manager Guide Video	2
2.1 Install All-In-One Manager	2
2.2 Set LCD Screen	2
Chapter 3 Barrier Gate Guide Video	3
3.1 52X Series Barrier Gate	3
3.2 32X Series Barrier Gate	3
3.3 30 Series Barrier Gate	3
3.4 4B Series Barrier Gate	4
3.5 Install Boom Pole	4
3.6 Accessories	4
Chapter 4 Remote Access ANPR Camera	5
4.1 Basic Configuration	5
4.2 Vehicle Pass Control Configuration	5
Chapter 5 Wiring	6
5.1 Access Control via License Plate	6
5.2 Access Control via Ticket	6
5.3 Access Control via Card	6
Chapter 6 FAQs	7

Chapter 1 Home Page



Chapter 2 All-In-One Manager Guide Video



2.1 Install All-In-One Manager

Click to watch the all-in-one manager installation guide video:

Or click the link to watch the HD video: <https://enpinfodata.hikvision.com/analysisQR/showQR/34a18bba>

2.2 Set LCD Screen

Click to watch the LCD screen configuration video:

Or click the link to watch the HD video: <https://enpinfodata.hikvision.com/analysisQR/showQR/05a1369c>

Chapter 3 Barrier Gate Guide Video



3.1 52X Series Barrier Gate

3.2 32X Series Barrier Gate

3.3 30 Series Barrier Gate

Note

Ensure your computer or phone can access the external network.

Install Barrier Gate	https://www.youtube.com/watch?v=XHymwOCPhoU
Install Barrier Gate with Strip Light	https://youtu.be/cvDCxwl64Ao

Set Remote Controller	<u>https://youtu.be/K1Qv6Z09neY</u>
Adjust Limit	<u>https://youtu.be/vzhnrN4db0E</u>
Auto Adjust Limit	<u>https://youtu.be/US5dge4UtvE</u>
Replace Barrier Arm	<u>https://www.youtube.com/watch?v=y5souo9CKeU</u>
Set Boom Pole Direction	<u>https://youtu.be/oLOEtu8wISI</u>

3.4 4B Series Barrier Gate



Ensure your computer or phone can access the external network.

Install Barrier Gate	<u>https://www.youtube.com/watch?v=eRks_eXZ5tE</u>
Set Remote Controller	<u>https://www.youtube.com/watch?v=D3n-0bbBK_A</u>
Adjust Limit	<u>https://www.youtube.com/watch?v=EZCNmJao9Tk</u>
Auto Adjust Limit	<u>https://www.youtube.com/watch?v=Mpe_J4JY3eQ</u>
Replace Barrier Arm	<u>https://www.youtube.com/watch?v=rEhJfi_0LqE</u>
Set Boom Pole Direction	<u>https://www.youtube.com/watch?v=xDK0putqwCk</u>

3.5 Install Boom Pole

3.6 Accessories

Chapter 4 Remote Access ANPR Camera



4.1 Basic Configuration

Click to watch the ANPR camera basic configuration video:

4.2 Vehicle Pass Control Configuration

Click to watch vehicle pass control configuration video:

Chapter 5 Wiring

Vehicle access can be managed through license plate, ticket, or card. Deployment plans can be tailored to your devices and specific scenarios.

5.1 Access Control via License Plate

To control vehicle access by license plate, deploy the devices as follows.

5.2 Access Control via Ticket

To control vehicle access by ticket, deploy the devices as follows.

5.3 Access Control via Card

To control vehicle access by card, deploy the UHF reader and barrier gate as follows.

Chapter 6 FAQs

Troubleshoot your issues according to the table below.

ANPR Camera	<u><i>How to configure TCG camera v5.4.4?</i></u>
52x Series Barrier Gate	• <u><i>How to wire and test the 52x barrier gate with a LED strip light?</i></u> • <u><i>How to replace the main board of 52x barrier gate?</i></u> • <u><i>How to upgrade firmware of 52x barrier gate?</i></u>
42x Series Barrier Gate	<u><i>How to configure 42x barrier gate?</i></u>
Radar	• <u><i>How to configure the TMG034 Radar (android)?</i></u> • <u><i>How to configure the TMG034 Radar (ios)?</i></u> • <u><i>How to configure TMG035(60G)?</i></u> • <u><i>How to configure TMG035(79G)?</i></u>
UHF System	<u><i>How to configure UHF system?</i></u>



See Far, Go Further