 



DS-K7R06 Wireless Keyfob User Manual

UD49018B

User Manual Flow Chart

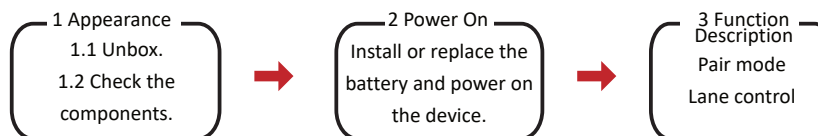


 1 Appearance

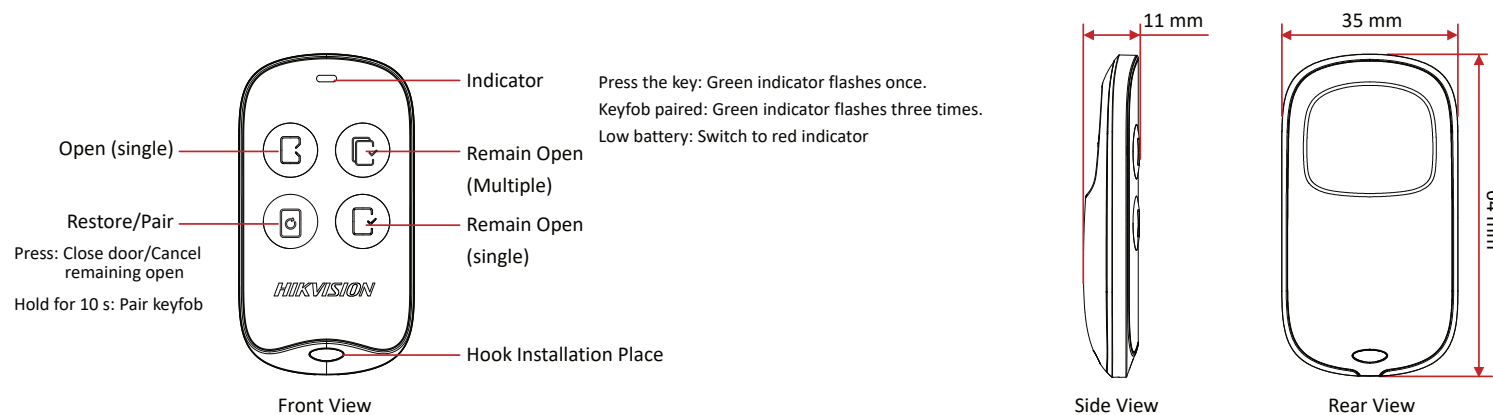


2 Power On

 • Install Battery

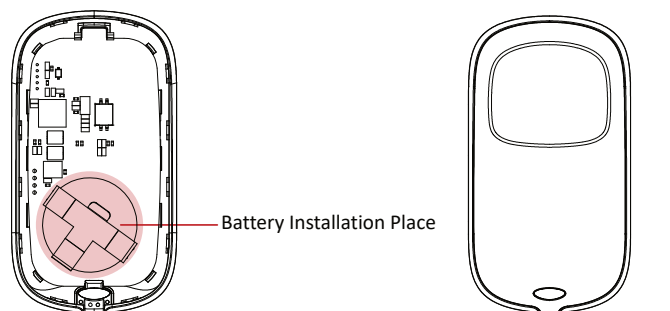

1. Install the battery to the front panel.
2. Assemble the rear panel back to the front panel.

 • Replace Battery

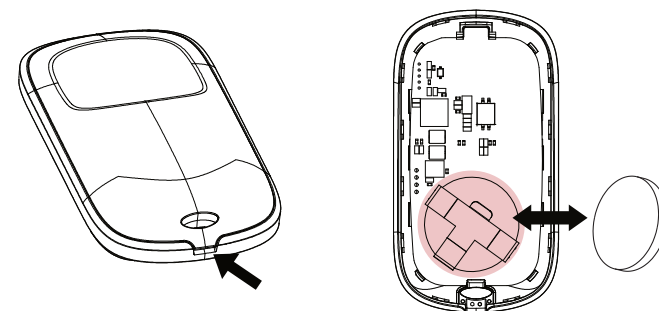

1. Use the slotted screwdriver to disassemble the rear panel according to the arrow.
2. Replace the battery. The positive side (marked with +) of the battery shall be facing upwards.

3 Function Description

Factors may affect the usage:

1. Obstacles (Wall, etc.);
2. People are walking near the turnstile or the keyfob;
3. There are metals near the turnstile.

● Pair Keyfob

Hold "Pair" for more than 10 s, and the keyfob starts pairing. After pairing completed, the green indicator will flash three times.

● Lane Control:

1. Single lane control: press the open (single)/remain open (single) key to open/remian open the single lane.
2. Multi-Lane control: press the remain open (multiple) key to remian open the selected lanes.

The keyfob must be used with web, you can select single lane/multi-lane in the **Keyfob Settings Page**, for more information see User Manual.

4 Specification

Working voltage	3.3 V±10%
Working temperature	-10 °C to 55 °C
Working humidity	10% to 90% (No condensing)
Protective level	IP32
Battery Type	CR2032 Lithium battery
Battery lifespan	Above 400 days (If use 100 times per day)
Button lifespan	≥100,000 times
Transmission distance	15 m
Indicator	Green flashes once (Press the key) Green flashes three times (Keyfob paired) Red (Low battery)
Frequency	433/868 MHz
Dimension	64 × 35 × 11 mm