



Body Camera

Quick Start Guide

About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<https://www.hikvision.com>). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product

This product can only enjoy the after-sales service support in the country or region where the purchase is made.

Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.
- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
 Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Note	Provides additional information to emphasize or supplement important points of the main text.

TABLE OF CONTENTS

Chapter 1 Product Introduction	1
1.1 Introduction	1
1.2 Packing List.....	1
1.3 Appearance	2
Chapter 2 Installation	5
2.1 Install Shoulder Clip	5
2.2 Install SIM Card	5
2.3 Install Body Camera Assistant	6
Chapter 3 Activation and Configuration	7
3.1 Activation	7
3.2 Detailed Configuration.....	7

Chapter 1 Product Introduction

1.1 Introduction

Body camera (hereinafter referred to as device) highly integrates with video recording, audio recording, capture, positioning, etc. It is embedded with positioning module with high sensitivity to locate the occurring position of events accurately. It can record the process and condition of events completely. You can also tag the important data for future search.

It is small and light, convenient to carry, and can be worn on the shoulder, satisfying the requirement of mobile duty and evidence record for single person. It is widely applicable to public security protection, city management, industry and commerce, etc.

1.2 Packing List

When you receive the product, check whether there is obvious damage on the product package and its appearance first. Then open the package and check whether all the accessories are included. If something loses, contact us or our supplier.

Table 1-1 Packing List

No.	Name	Quantity
1	Body camera	1
2	Shoulder clip	1
3	USB data cable	1
4	Charger	1
5	Regulatory Compliance and Safety Information	1

1.3 Appearance

Refer to the figure and table below for the appearance of the device.

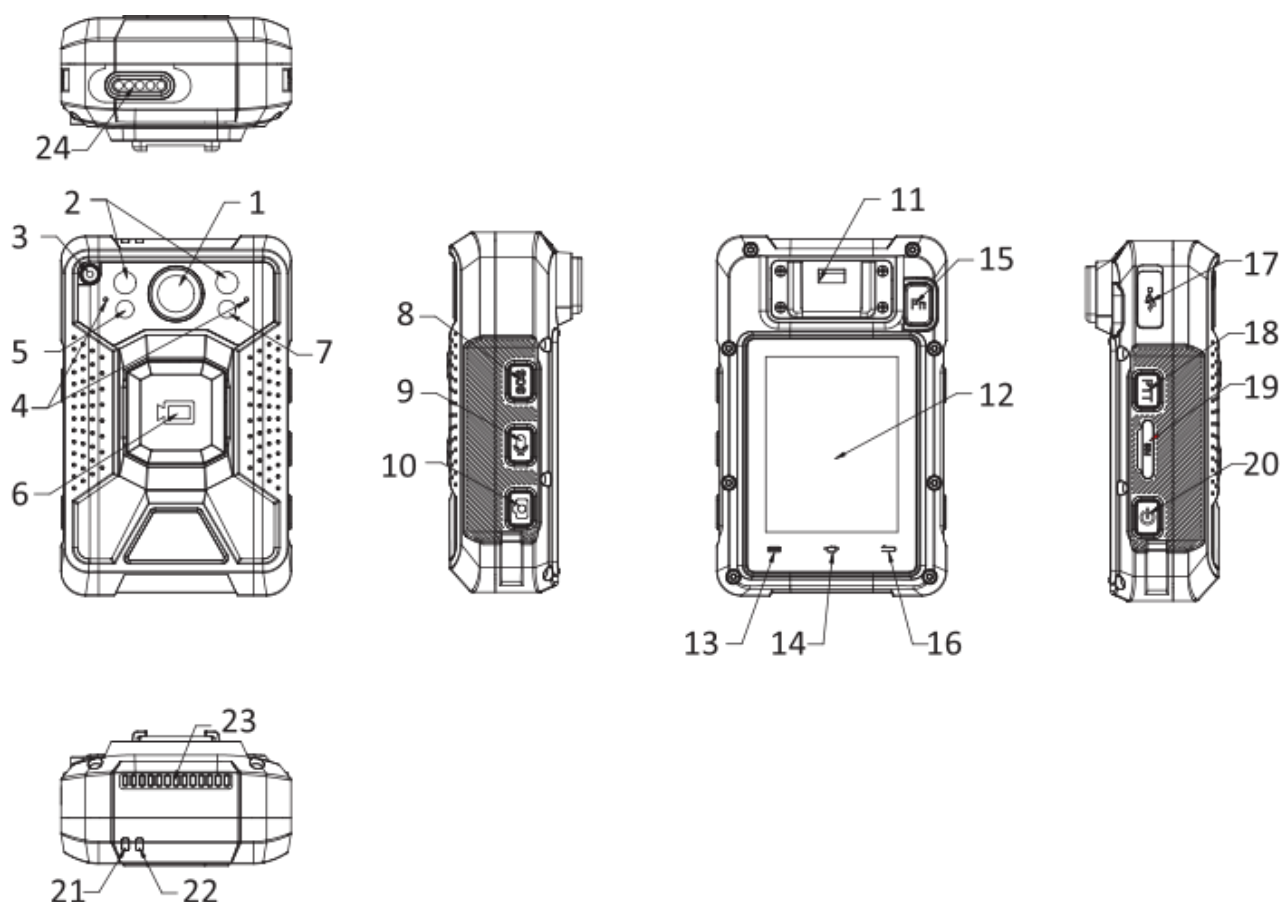


Figure 1-1 Appearance

Table 1-2 Appearance Description

No.	Name	Description
1	Lens	For recording and capture.
2	IR lights	- If you set IR as ON, the IR lights will be enabled during recording or remote live view. - If you set IR as AUTO, the IR lights will be enabled automatically during recording or remote live view when the illumination is insufficient.
3	Laser light	After the device starts up, hold the recording button to enable laser light which can point to the center of the image. Then hold it again to disable laser light. ⚠ Caution The laser radiation emitted from the device can cause eye injuries, burning of skin, or inflammable

Body Camera Quick Start Guide

No.	Name	Description
		substances. ● Before enabling the function, make sure no human or inflammable substances are in front of the laser lens. ● Do not place the device where minors can fetch it.
4	MIC	For sound collection.
5	LED light	After the device starts up, hold the audio recording button to turn on LED light for light supplement or emergency illumination. Then hold it again to turn off LED light.  Note If you turn on LED light while IR function is enabled already, the IR function will be disabled forcibly. After you turn off LED light, the IR function will restore to be enabled.  Caution ● Exposure to LED light at 200 mm poses a retinal blue-light hazard (Class 1). Do not stare directly at the illuminated LED light, as it may cause eye damage. ● Exposure to LED light may pose a photoradiation hazard. Keep a safe distance of approximately 0.60 m. ● When installing or maintaining the device without proper protection (e.g., wearing sunglasses), ensure you are either outside the safe distance range or in an area where the light source does not directly shine on you before turning on the light source.
6	Video recording	● After the device starts up, press it to start recording. Then press it again to stop recording. ● When the device is shut down, hold it to start it up and start recording.
7	Photosensitive sensor	It can detect the surrounding light and adjust the LCD brightness to save power and make your eyes comfortable.
8	SOS	After the device starts up, hold it to send the alarm signal to the connected platform manually.
9	Audio recording	After the device starts up, press it to start recording

Body Camera Quick Start Guide

No.	Name	Description
		audio. Then press it again to stop.
10	Capture	After the device starts up, press it once to capture a picture.
11	Shoulder clip slot	For shoulder clip installation.
12	LCD	For local menu display and operation.
13		In live view mode, tap it to enter the main menu.
14		Tap it to go to the live view page.
15	Fn	During recording, press it to set a tag for the current video. Then hold it to cancel the tag.  Note Tagging only takes effect for the current video. When the recording ends, tagging stops.
16		Tap it to return to the upper menu.
17	USB interface plug	Open the plug to connect to data cable to the USB interface for charging or data transmission.
18	PTT	After the device starts up, hold it to set the device as a MIC or loudspeaker to start two-way audio.
19	SIM card tray	For SIM card installation.
20	On/Off	- When the device is off, hold it to start it up. - When the device is on, hold it to shut it down. - After the device starts up, press it to sleep/wake up the screen display.
21	LED 1	- Solid green: The device is running. - Flashing yellow (low frequency): The device is recording audio.
22	LED 2	- Solid red: The device is being charged. - Solid green: The device is fully charged. - Flashing red (high frequency): The device is in low battery. - Flashing red (low frequency): The device is recording video.
23	Loudspeaker	For sound play.
24	Expansion interface	Reserved.

Chapter 2 Installation

2.1 Install Shoulder Clip

Install the shoulder clip if you want to wear the device on your shoulder.

Steps

1. Insert the shoulder clip down into the slot on the front panel of the device.

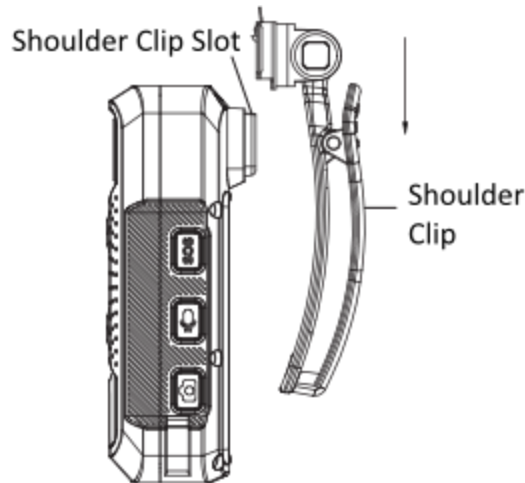


Figure 2-1 Install Shoulder Clip

2. Check if the clip is inserted into the slot firmly.
3. Optional: To uninstall the shoulder clip, press the buckles on both sides of the clip inwards with your fingers, and slide the clip upwards to uninstall it.

2.2 Install SIM Card

Install a SIM card on the device if you want to connect to the network.

Before You Start

Please prepare a SIM card by yourself.



Caution

Be sure to use a standard Nano-SIM card. Otherwise, the SIM card or the device may be damaged.

1. Pull the SIM card tray out from the SIM card slot on the side of the device.
2. Put the SIM card onto the tray with the metal side facing upward.
3. Insert the tray with the SIM card into the SIM card slot.

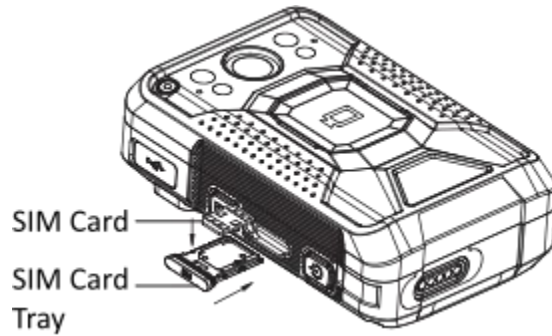


Figure 1-1 Install SIM Card

2.3 Install Body Camera Assistant

Install Body Camera Assistant (hereinafter referred to as software) if you want to configure the device parameters, download files, etc. via the computer. Contact the technical support for the software.

Steps

Note

Install "BodyCameraAssistant-win32.exe" if your computer is in 32-bit operating system. Install "BodyCameraAssistant-win64.exe" if your computer is in 64-bit operating system.

1. Get the installation file, and double click it.
2. Select the software saving path, and click **Next**.

Note

The software is installed in C disk by default. You can click **Browse** to change the saving path.

3. Click **Next**.
4. Check **Create a desktop icon** according to your needs, and click **Next**.
5. Click **Install**.
6. Click **Next** to install the software drive.
7. Click **Finish**.
8. Click **Finish** to run the software.

Chapter 3 Activation and Configuration

3.1 Activation

Activate the device for the first-time use.

Steps

1. After you start up the device, you will enter the activation page. Set a custom 6-digit admin password, and confirm the password.



The password can contain the same digits.

2. Select **Activation**.

3.2 Detailed Configuration

Scan the QR code below to get the user manual for detailed configuration.



Figure 3-1 User Manual QR Code



See Far, Go Further